

DE

**Montageanleitung –**  
**BETTEMINIMUM WANNENTRAEGER**

GB

**Installation instructions –**  
**BETTEMINIMUM-POLYSTYRENE SUPPORT**

FR

**Instructions de montage –**  
**BETTESUPPORT MINIMUM**

NL

**Montagehandleiding –**  
**BETTEMINIMUM-DOUCHEBAKDRAGER**

IT

**Istruzioni di montaggio –**  
**BETTESUPPORTO IN POLISTIROLO SLIM**

ES

**Instrucciones de montaje –**  
**BETTESOPORTE DE POLIESTIRENO**  
**MINIMUM**

RU

**Инструкция по монтажу –**  
**ВЕТТЕМИНИМАЛЬНАЯ ПОЛИСТИРОЛОВАЯ**  
**ПОДУШКА**

CN

**安装说明书 –**  
**BETTE超薄贴地型淋浴底盘基座**

CZ

**NÁVOD K MONTÁŽI –**  
**BETTENOSIČ VANIČKY MINIMUM**


SK





**Návod na montáž –**  
**BETTEMINIMALISTICKÝ NOSIČ VANIČKY**






PL

**Instrukcja montażu –**  
**BETTEMINIMALNE PODPARCIE BRODZIKA**

**BETTE**

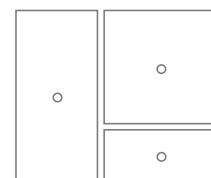

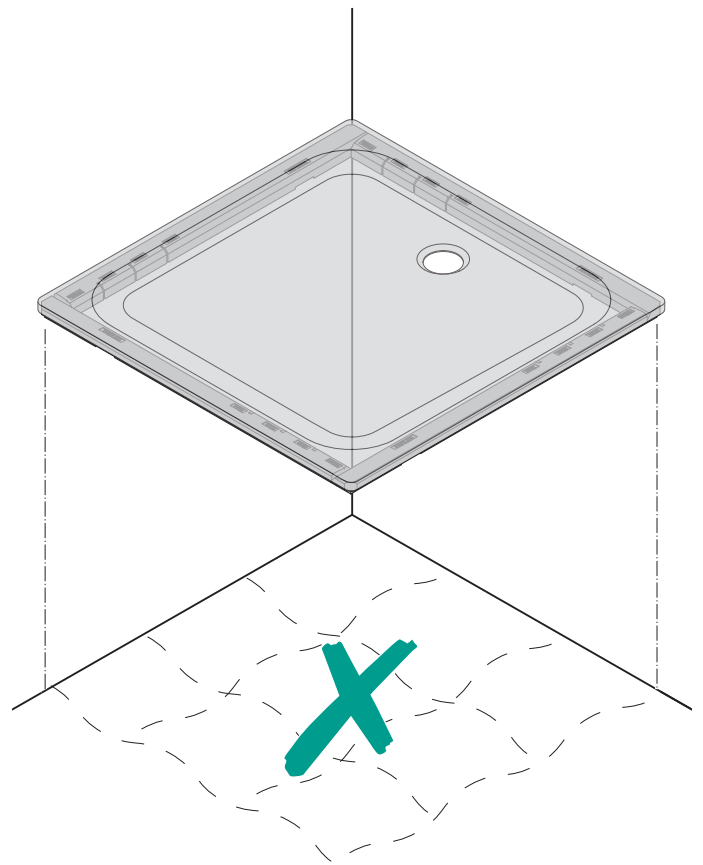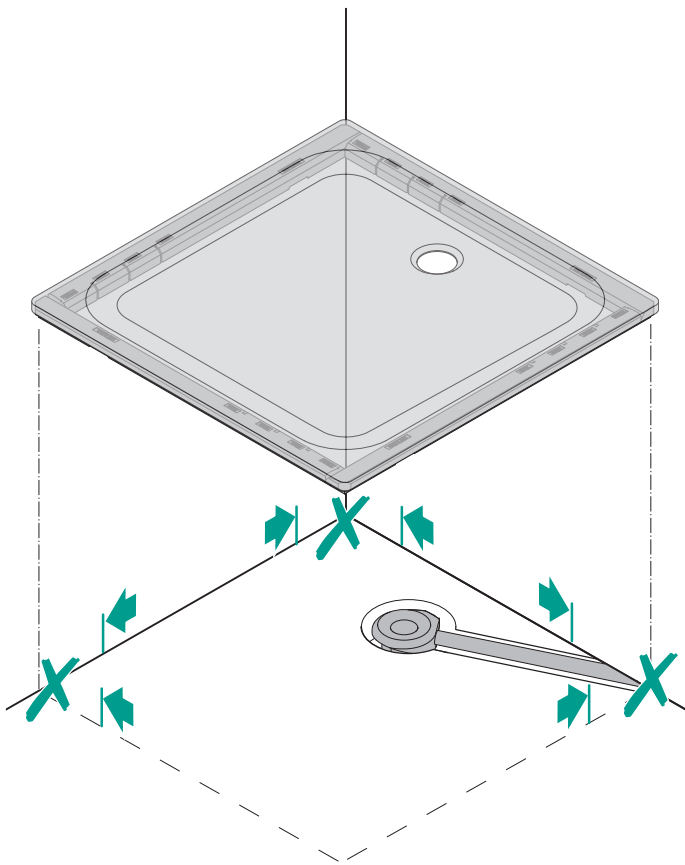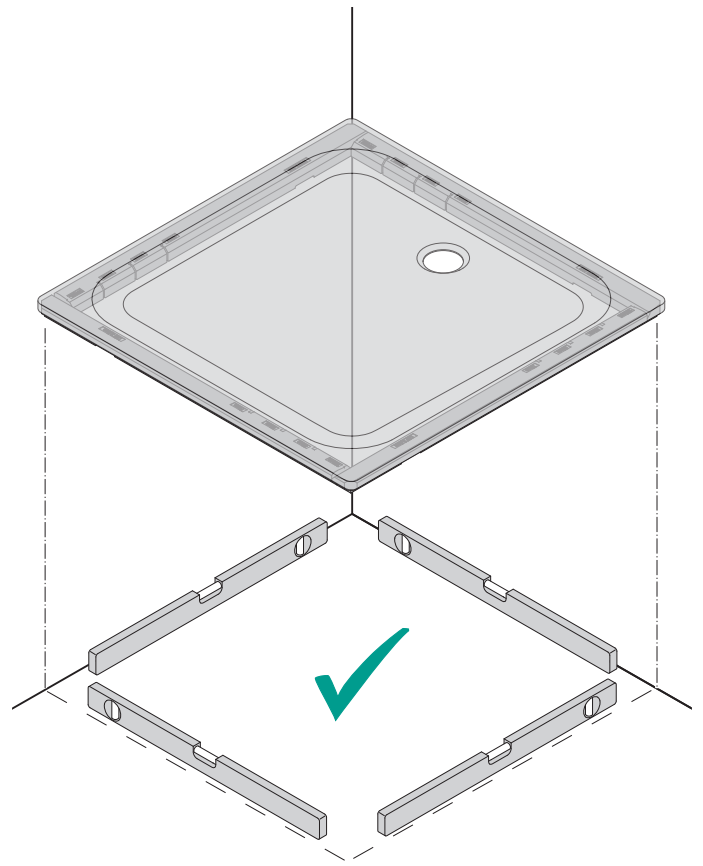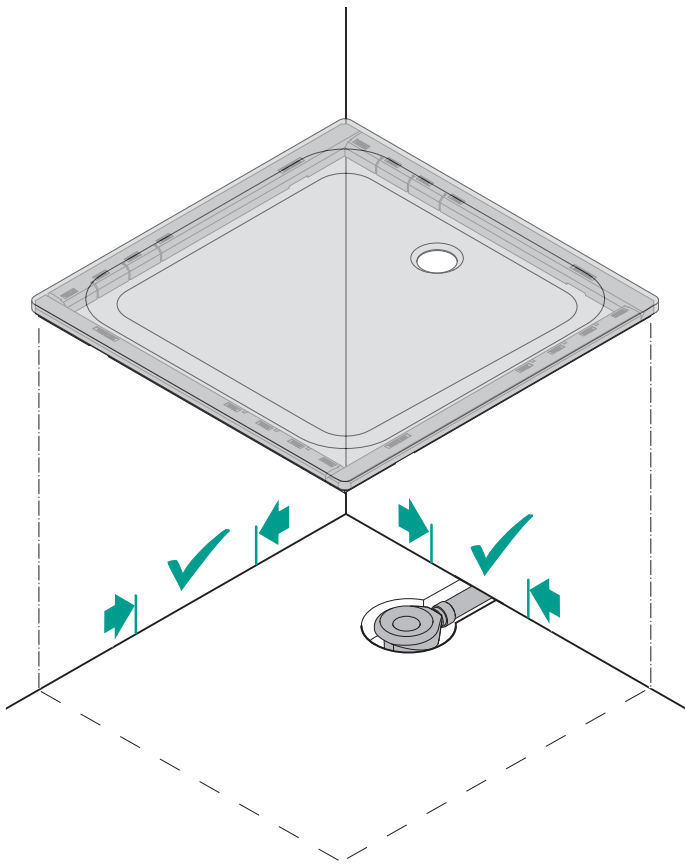

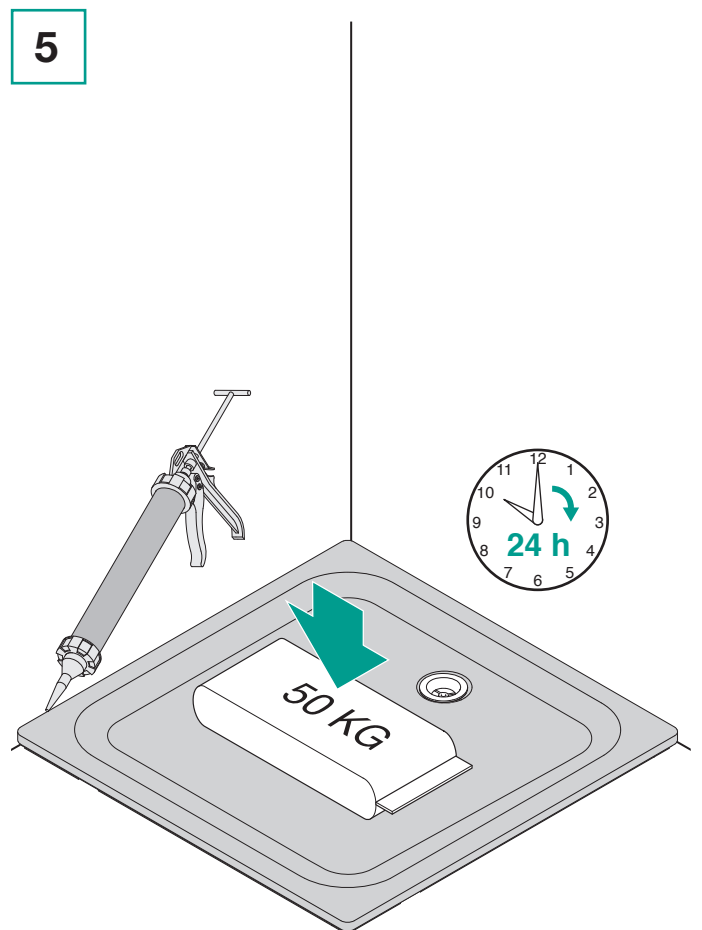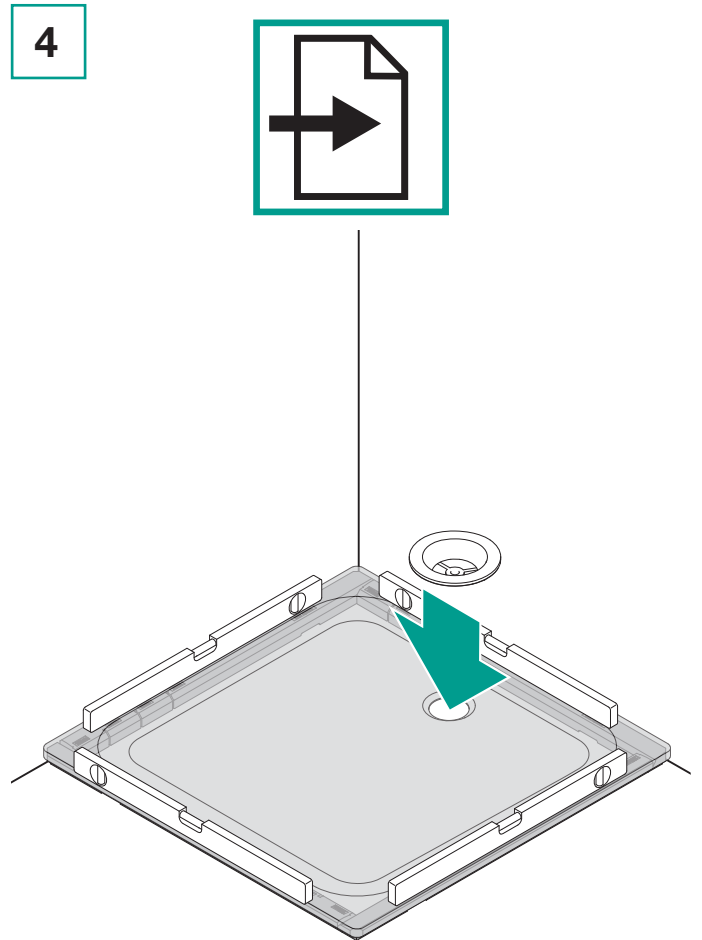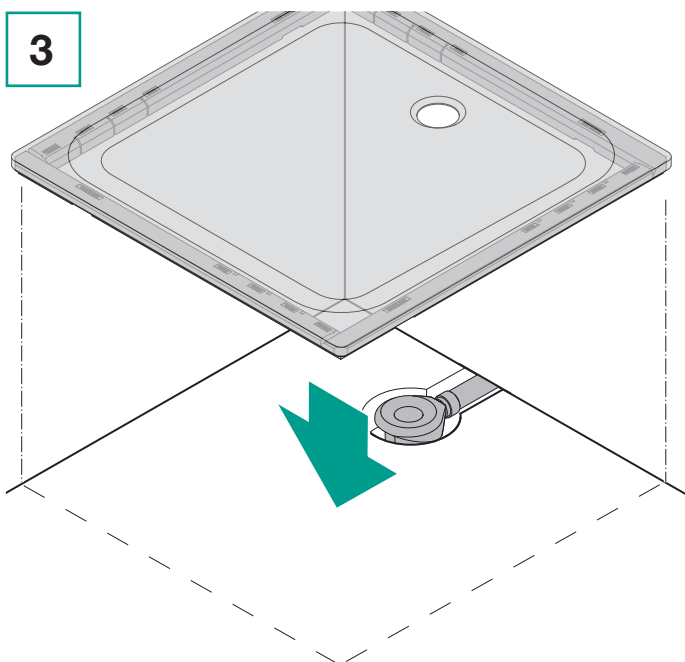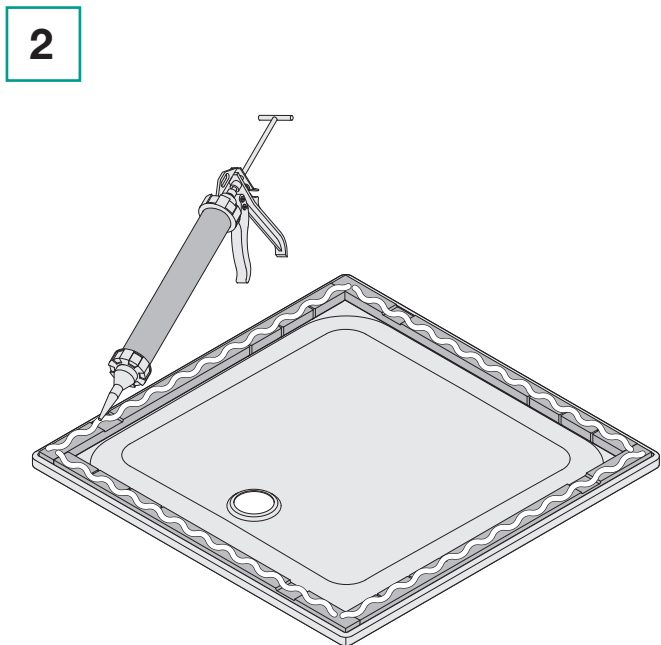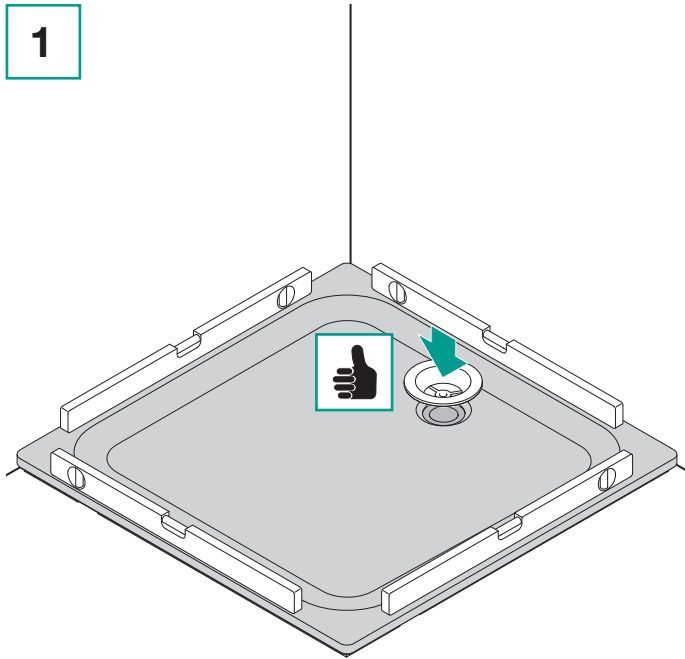

**Bette GmbH & Co. KG**  
Heinrich-Bette-Straße 1  
D-33129 Delbrück  
Tel.: +49 5250 511-0  
Fax: +49 5250 511-130  
[info@bette.de](mailto:info@bette.de)  
[www.bette.de](http://www.bette.de)