



19698


DE	MONTAGEANLEITUNG:	SEITENWAND
GB	INSTALLATION INSTRUCTIONS:	FIXED PANEL
FR	NOTICE DE MONTAGE:	PAROI FIXE
CZ	NÁVOD K MONTÁŽI:	BOČNÍ STĚNA
PL	INSTRUKCJA MONTAŻU:	ŚCIANA BOCZNA
IT	ISTRUZIONI PER IL MONTAGGIO:	PARETE LATERALE
SK	NÁVOD NA MONTÁŽ:	BOČNÁ STĚNA

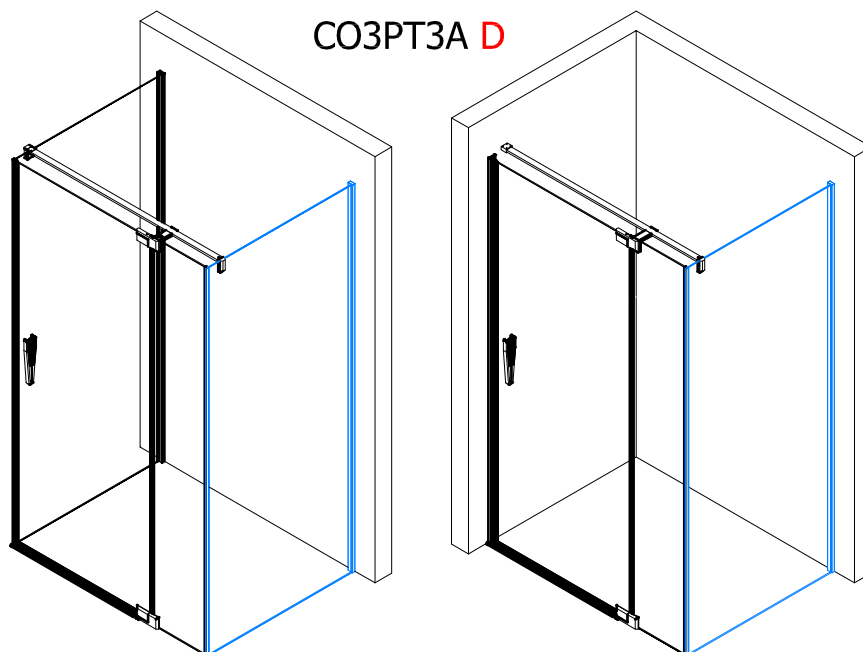












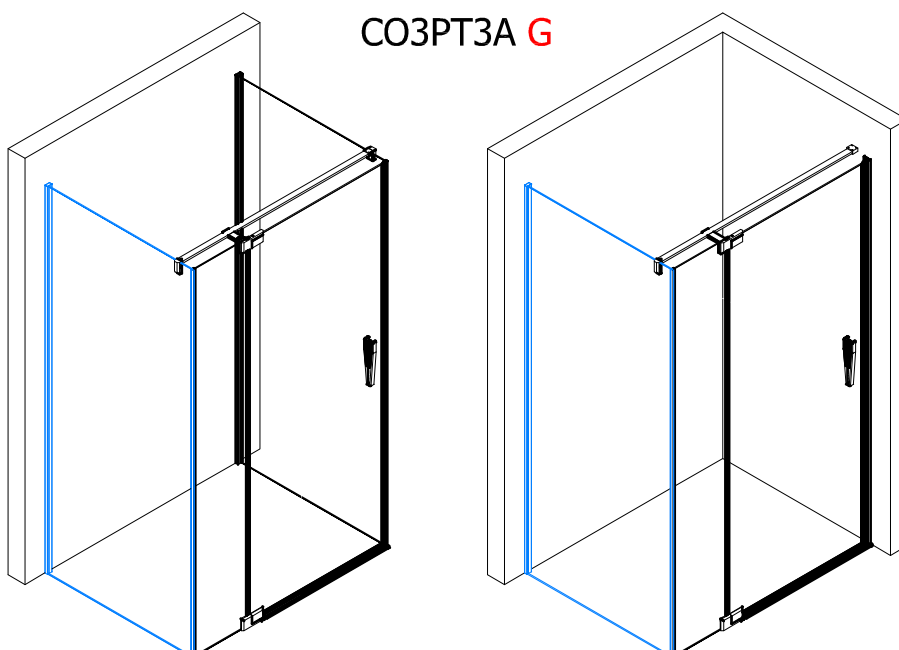


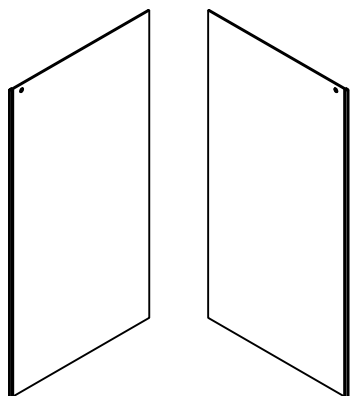



CO3PT3A **D**




CO3PT3A **G**





50034  	50034  	42356.1967  	52203U2 1000.F  	50314.50.1400  	31107.1  	 4 x 16016 Ø 6mm
						 2X 51209
						 51599.10
						 4 x 14139 4.2X50mm
						 1X 54164.10
MT0379.10 		MT0332.10 				 2+2.5 +3mm

CO3PT3A **D**

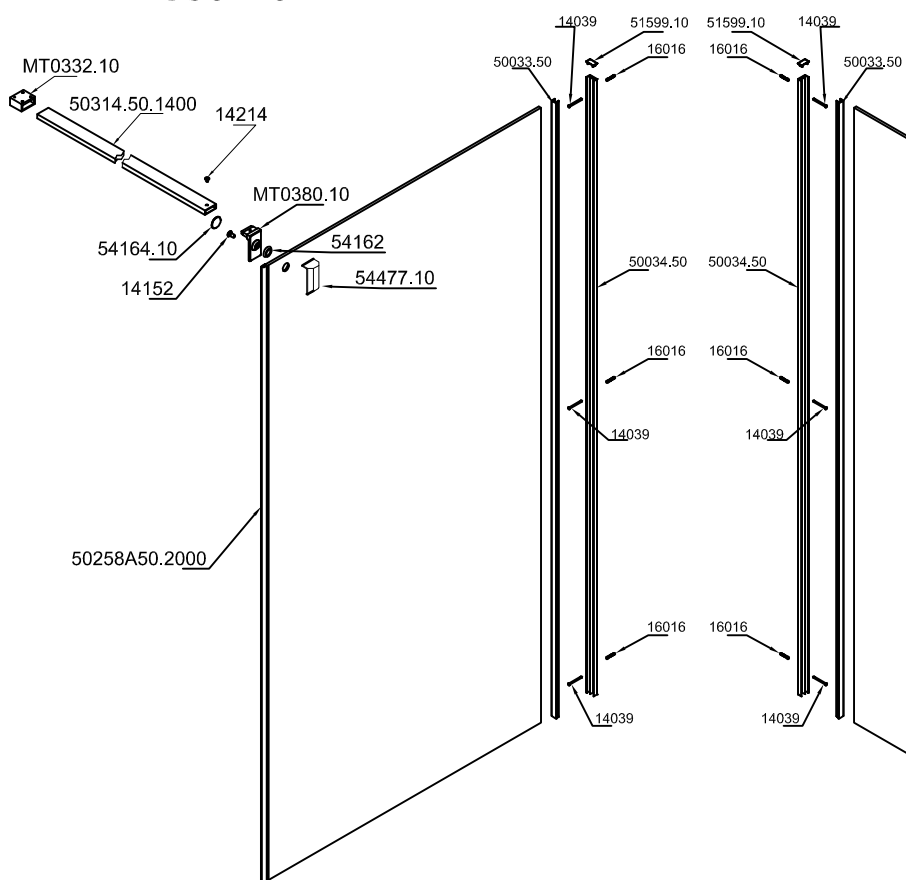

CO3PT3A **G**

