



# KOLO

## TWINS


PL	SZAFKA PODUMYWALKOWA	INSTRUKCJA MONTAŻU
EN	WASHBASIN CABINET	INSTALLATION INSTRUCTION
CZ	SPODNÍ SKŘÍŇKA K UMYVADLU	NÁVOD NA MONTÁŽ
SK	SPODNÁ SKRINKA PRE UMYVADLU	NÁVOD PRE MONTÁŽ
BG	ШКАФЧЕ ЗА МИВКА	ИНСТРУКЦИЯ ЗА МОНТАЖ
UA	ШАФА ПІД УМИВАЛЬНИК	ІНСТРУКЦІЯ З МОНТАЖУ
RU	ШКАФЧИК ПОД УМЫВАЛЬНИК	ИНСТРУКЦИЯ МОНТАЖА
RO	DULAPIOR SUB CHIUVETA	INSTRUCȚIE A MONTAJULUI
HU	MOSDÓSZEKRÉNY	ÖSSZESZERELÉSI ÚTMUTATÓ

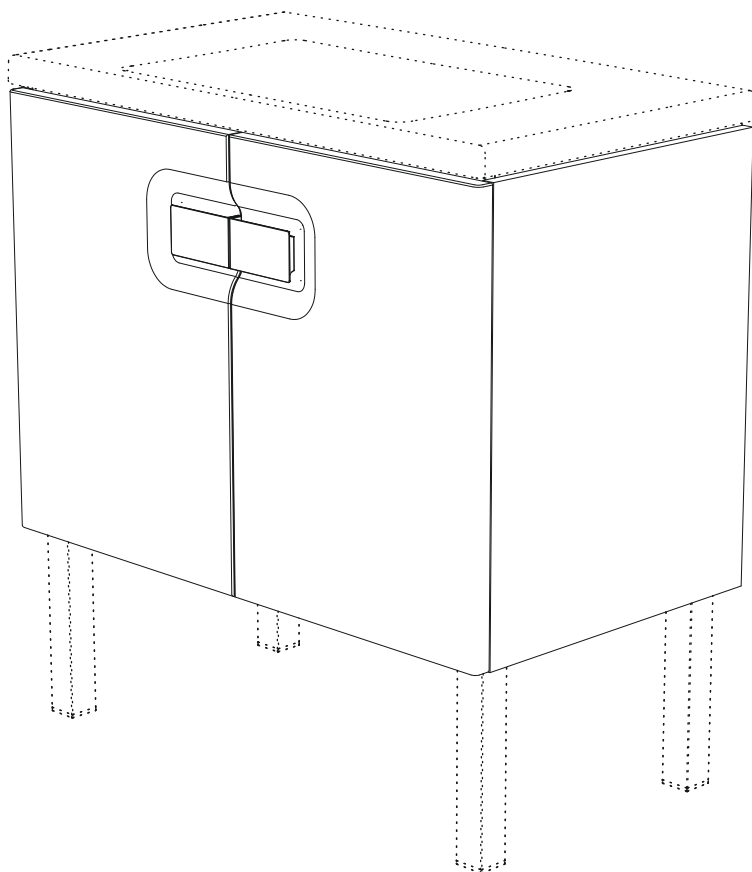

89547 89548 89549

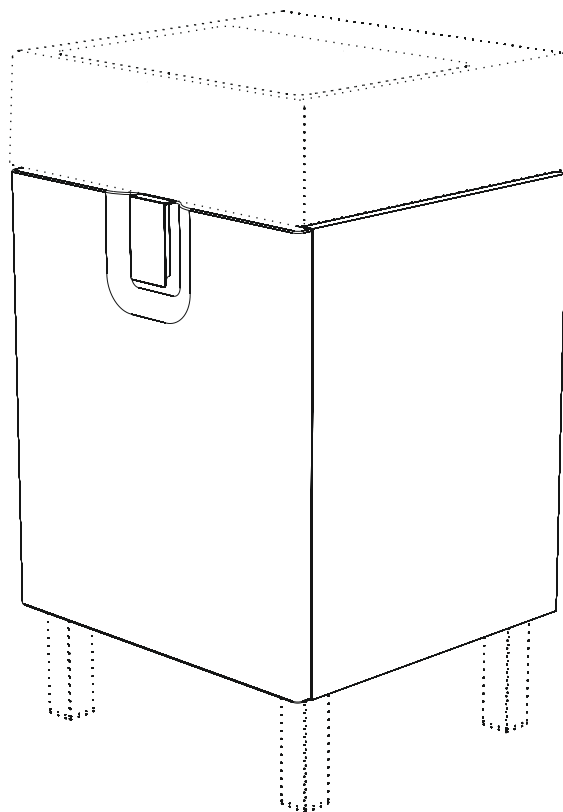

89483 89484 89485  
89486 89487 89488

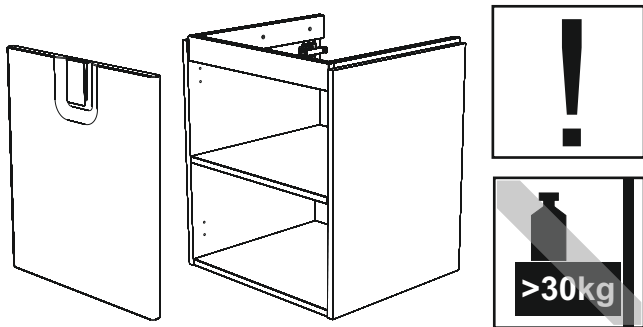

Ø 10



x 2

Ø 35



x 2

Ø 5




x 2




x 12

89483  
89483



x 2

89484  
89484



x 2


89485  
89485

Ø 3,5






x 4


1

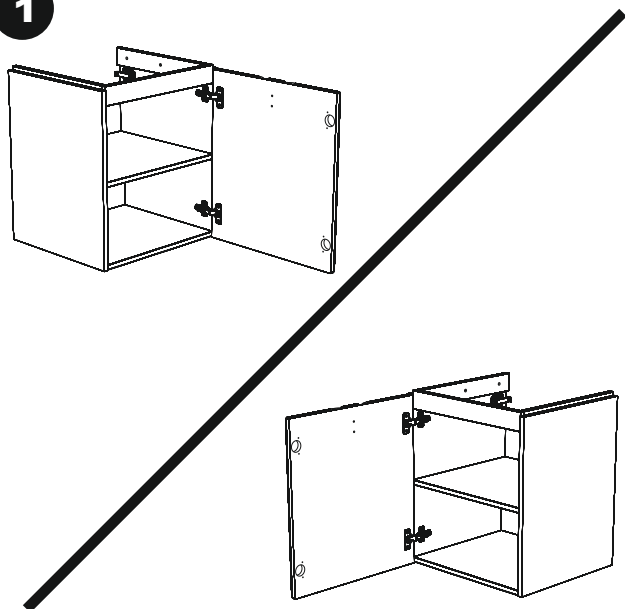


2

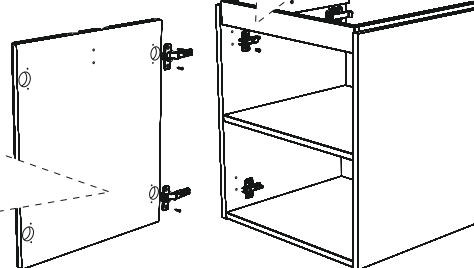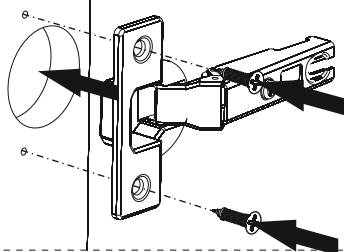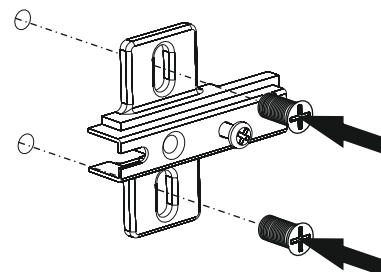

3

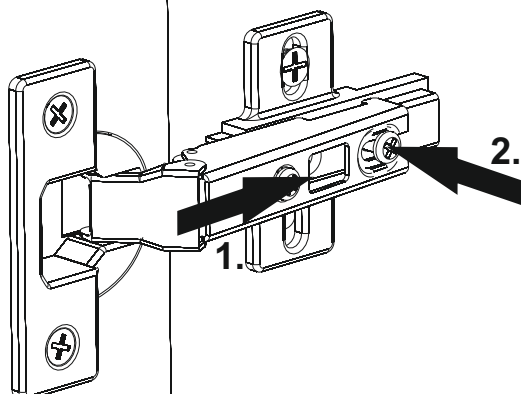

4

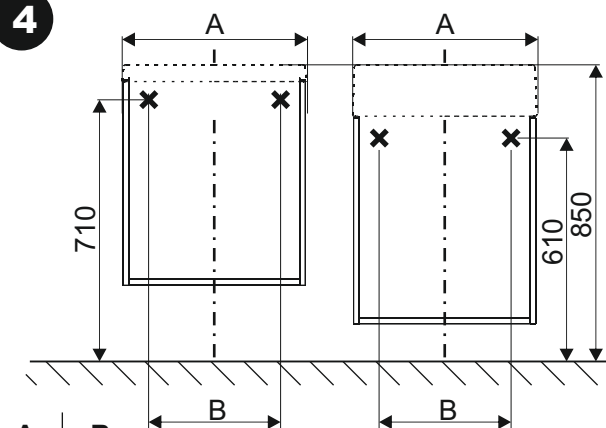

A	B
50	442
60	542
80	742



